



NOVAIR



NOVAIR Medical Gas Pipeline COMPREHENSIVE MEDGAS SYSTEM


📍 814 WURLITZER DR., NORTH TONAWANDA, NY 14120 USA

☎ 716-564-5165

✉ INFO@NOVAIR-USA.COM



WWW.NOVAIR-USA.COM

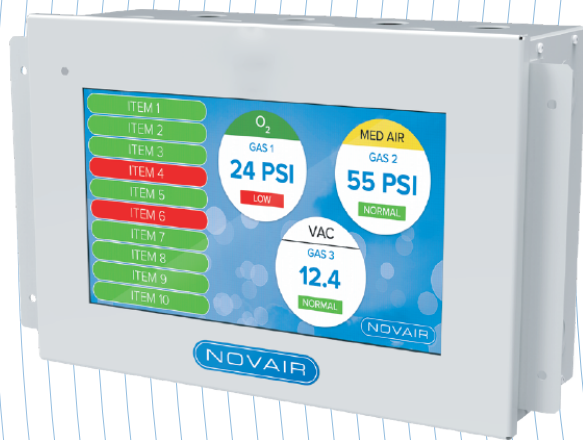


LCD Alarms

INDUSTRY 1ST "SINGLE BOARD" HARDWARE
SUITABLE FOR:

- AREA ALARMS
- MASTER ALARMS
- COMBO ALARMS

BENEFITS:

- SPACE AND LOGISTIC SAVINGS UNIQUE TO SINGLE BOARD HARDWARE
- GAS SPECIFIC SENSORS
- EASY TO INSTALL

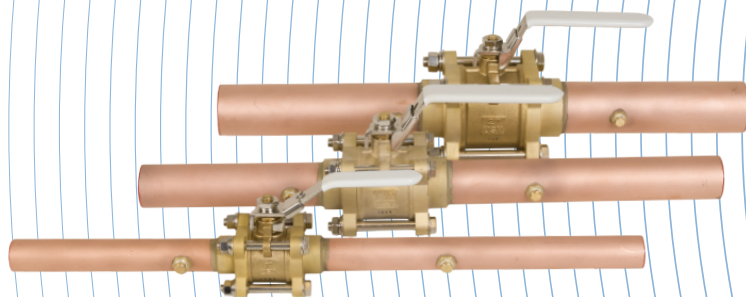

Isolation Valves

OUR VALVE IS A FULL PORT, DOUBLE SEAL, BALL-TYPE THREE PIECE DESIGN WITH FORGED BRASS BODY AND CHROME-PLATED BRASS BALL. ONLY 1/4 TURN OF THE HANDLE IS REQUIRED TO OPERATE THE VALVE FROM OPEN TO CLOSED POSITION. ALL VALVES ARE SERVICEABLE IN THE LINE AND SUPPLIED CLEAN AND PREPARED FOR OXYGEN SERVICE AS PER CGA GUIDELINES.

FEATURES:

- DUAL GAUGE PORT DESIGN
- BLOWOUT PROOF VALVE STEM
- 3 PIECE DESIGN FOR EASE OF MAINTENANCE
- TEFLON® SEATS AND SEALS
- 100% PNEUMATICALLY TESTED
- FULL PORT DESIGN
- VALVE LOCKING HANDLE STANDARD



Medical Gas Outlets

FEATURES:

CHECK VALVES: INCLUDES CHECK VALVES ON BOTH THE PRIMARY AND SECONDARY SECTIONS OF THE OUTLET FOR SECURE GAS FLOW CONTROL.

CONNECTION TYPE: COMPATIBLE WITH SPECIFIC QUICK CONNECT OR THREADED ADAPTERS TAILORED FOR EACH INDIVIDUAL GAS TYPE, ENSURING SAFE AND EFFICIENT SERVICING.

REGULATORY COMPLIANCE: MANUFACTURED IN ADHERENCE TO NFPA 99 CODE REGULATIONS FOR MEDICAL GAS SYSTEMS.

OXYGEN COMPATIBILITY: ALL OUTLETS AND INLETS ARE FACTORY TESTED AND CLEANED FOR OXYGEN USE, MEETING ASTM B819 SPECIFICATION STANDARDS.

MODULAR MOUNTING: DESIGNED FOR MODULAR MOUNTING ON WALLS OR MEDICAL BEDHEAD UNIT SYSTEMS FOR VERSATILE INSTALLATION.

Zone Valve Boxes

VALVE BOX FOR MEDICAL GAS SECTIONS COMPLIES WITH NFPA99 CODE DESIGNED FOR 600 PSI. IT HAS THREE PIECE BRASS BALL VALVES FOR WELDING WITH COPPER PIPING EXTENSIONS AND POLYTETRAFLUOROETHYLENE (PTFE) THREADED SEALS. (DOES NOT INCLUDE THREADED CONNECTORS).



Source Equipment

MODULAR SOURCE EQUIPMENT AVAILABLE WITH SCROLL AND RECIPROCATING AIR COMPRESSORS, CLAW, LUBRICATED, AND DRY ROTARY VANE TECHNOLOGY FROM WORLD RENOWNED BRAND.

COMPLETE SITUATION AWARENESS WITH INTUITIVE HMI TOUCH SCREEN CAPABLE OF PROVIDING FULL SYSTEM OVERVIEW FROM A SINGLE SCREEN INTERFACE.

REMOTE MONITORING AND EASY REMOTE DIAGNOSTIC ANALYSIS.




WWW.NOVAIR-USA.COM





WWW.NOVAIR-USA.COM



NOVAIR

FOR OVER **45** YEARS, THE **NOVAIR** BRAND HAS BEEN RENOWNED GLOBALLY FOR MANUFACTURING RELIABLE AND INNOVATIVE **MEDICAL** SYSTEMS FOR ALL HOSPITAL GAS DISTRIBUTION AND GENERATION NEEDS. AT **NOVAIR USA**, WE TAKE PRIDE IN MANUFACTURING STATE-OF-THE-ART **MEDICAL AIR** AND **VACUUM** SYSTEMS RIGHT HERE IN THE **UNITED STATES**. COMMITTED TO EXCELLENCE, OUR SYSTEMS ARE METICULOUSLY DESIGNED AND MANUFACTURED IN STRICT ACCORDANCE WITH **ISO 9001, ISO 13485, NFPA99**, AND OTHER RELATED STANDARDS TO ENSURE THE HIGHEST LEVEL OF SAFETY AND RELIABILITY.

NOVAIR

Why Choose NOVAIR USA?

MADE IN THE USA: OUR SYSTEMS ARE PROUDLY MANUFACTURED IN THE UNITED STATES, ENSURING THE HIGHEST QUALITY AND ADHERENCE TO LOCAL STANDARDS.

APPROVALS: NOVAIR USA PRODUCTION FACILITIES ARE CERTIFIED UNDER THE ISO 9001 AND ISO 13485 QUALITY MANAGEMENT SYSTEM. AIR AND VACUUM SYSTEMS ARE DESIGNED AND MANUFACTURED IN STRICT ACCORDANCE WITH NFPA99 GUIDELINES, ENSURING PATIENT SAFETY AND REGULATORY COMPLIANCE.

EXCEPTIONAL SUPPORT: WE OFFER COMPREHENSIVE CUSTOMER SUPPORT, INCLUDING INSTALLATION, MAINTENANCE, AND TECHNICAL ASSISTANCE, TO KEEP YOUR FACILITY RUNNING SMOOTHLY.

CUSTOM SOLUTIONS: NOVAIR USA CAN TAILOR OUR SYSTEMS TO MEET YOUR SPECIFIC REQUIREMENTS, ENSURING OPTIMAL PERFORMANCE AND EFFICIENCY.

CHOOSE NOVAIR USA FOR TOP-OF-THE-LINE MEDICAL AIR AND VACUUM SYSTEMS THAT PRIORITIZE SAFETY, EFFICIENCY, AND RELIABILITY. CONTACT US TODAY TO DISCUSS HOW OUR CUTTING-EDGE TECHNOLOGIES CAN BENEFIT YOUR HEALTHCARE FACILITY.

